

CABLE COVER ASSEMBLY & INSTALLATION





Model: AKI00

- Draw a vertical line on the wall where you will be center of the cable cover.
- Make sure that line is slightly shorter than the cable cover so that it is not seen after installation.



- Drill the holes as marked, Insert the wall anchors supplied into the holes.

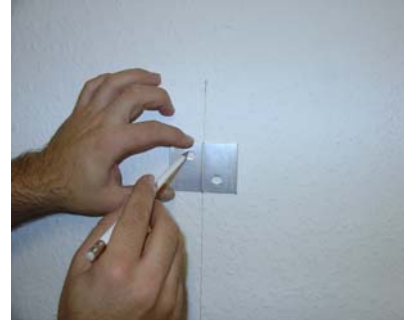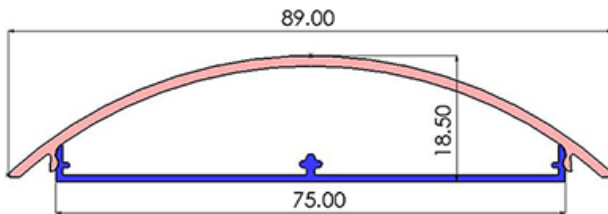

Fasten each wall bracket into the wall using the screws provided.



Tie the cables together using the cable ties provided, cut the cable ties to length



Push the top cover onto wall brackets.

Aluminum cable cover may be cut to size.
If cable cover is going to be cut to size, use the gloves and after cutting is done, remove sharp edges.

